


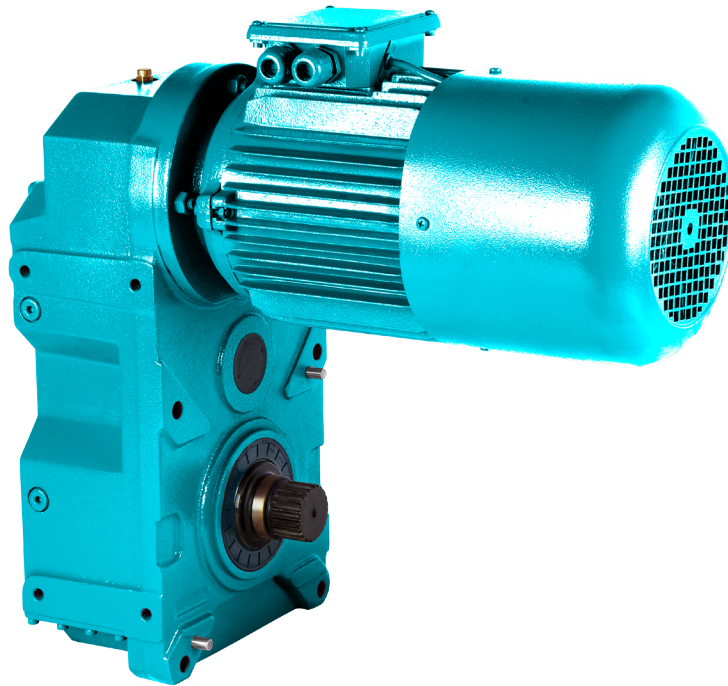

Brevini Gearmotors


Parallel Shaft Helical Gearboxes for Hoisting

Operating Instructions

Operating Instructions

V Series

Contents

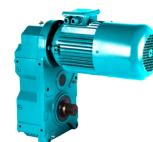


Contents.....	02
1 - How to Use This Manual	04
2 - Unit Designation	05
2.1- Detailed Unit Designation	05
2.2- Nameplate, Unit Designation	06
3.Standard Type Gearbox Part List	07
3.1- V... Types	07
4- Safety	08
4.1- Intended Use	08
4.2- Improper Use.....	08
4.3- Safety Instructions.....	09
4.3.1- General Safety Instructions	09
4.3.1.1- Working on the Gear Unit.....	09
4.3.1.2- Operation	09
4.3.1.3- Maintenance.....	09
4.3.1.4- Lubricant.....	09
4.3.1.5- Ambient Conditions.....	09
4.4- Tightening Torques.....	10
4.5- Case of Fire.....	10
4.5.1- Suitable Extinguishing Agents.....	10
4.5.2- Unsuitable Extinguishing Agents.....	10
5 - Things to Check	11
5.1- Transportation	11
5.2- Storage.....	12
6- Installing the Gear Unit.	12
6.1- Before You Start	12
6.2- Checking splined shaft dimensions	12
6.3- Checking drum connection flange dimensions.....	14
6.4- Checking ambient temperature	15
6.5- Checking voltage supply	15
6.6- Checking mounting position	18
6.7- How to use breather plug	18
6.8- Checking oil level	18
6.9- Checking shaft ends and mounting faces	18
6.10- Covering abrasive ambient.....	18
6.11- Checking accessibility to filling, breather and drain plugs	19


Operating Instructions

V Series

Contents

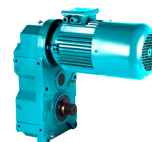

7- Mechanical Installation	19
7.1- Installing output shaft elements.....	20
7.2- Correct position of output shaft elements.....	20
7.3- Coupling connection.....	21
8- Maintenance & Inspection	22
9- Lubrication	23
9.1- Oil Types	23
9.2- Changing the Oil.....	24
9.3- Oil quantities (lt) and plugs.....	25
9.4- Mounting Positions	26
10- Troubleshooting Guide	27
11- Disposal.....	30
11.1- Disposal of oil	30
11.2- Disposal of sealing	30
11.3- Disposal of metal parts	30

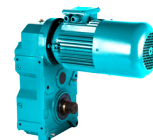

1- How To Use This Manual

Take attention to the following safety and warning signs for proper understanding and quick reference.



Electric Hazard; Can cause severe or fatal injuries.



Mechanical Hazard; Can cause severe or fatal injuries.



Likely to be Hazardous; Can cause minor injuries



Damage Risk; Can damage the drive or environment



Important Information



EC Machinery Directive:

Within terms of the EC machinery directive 2006/42/EC the gear reducer is not considered an autonomous machine, but as a component to install in machines. Operation is prohibited within the area of validity of the EC directive, until it has been determined that the machine, in which this product is installed, corresponds to the regulations within this directive.

The operating instructions contain important information to ensure;

- Trouble-free operation
- Fulfilment of any rights to claim under guarantee

The operating instruction must be kept close to the gearbox and must be available in case it is needed.

This operating instruction is written for V Series gear units and is applicable only for V Series. If any different type of gearbox is used please ask BREVINI POWER TRANSMISSION SPA for the operating instructions of that type.


This instruction can be used only for standard type geared units of BREVINI POWER TRANSMISSION SPA. For special application and modified gear units ask BREVINI POWER TRANSMISSION SPA for validity.

This manual does not cover 94/9/EC compatible gearboxes. For 94/9/EC contact BREVINI POWER TRANSMISSION SPA.

Operating Instructions

V Series

Type Designations

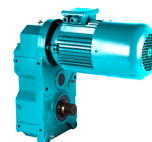

2- Unit Designation

2.1- Detailed Unit Designation



V R 5 7 3 . 1K - 132S / 4 - L10

Brake

L-230V With Fan
P-24V With Fan
S-230 V Without Fan
Z-24 V Without Fan

00- 5 Nm	10- 100 Nm
01- 10 Nm	20- 200 Nm
02- 25 Nm	30- 300 Nm
04- 40 Nm	40- 400 Nm
05- 50 Nm	50- 500 Nm

Number of Poles

Motor Size

132S / 4

Pole Number

Frame Length

Motor Size

Output Shaft with Spline (DIN5480)

1K Standard

1L Optional

1M Optional (Only for VR673)

Stage

3 Stages

Revision Number

Housing Size


3...7

Input Type

R : With Motor

Gearbox Type

V Serie

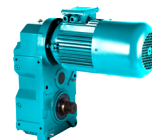

2.2- Nameplate, unit designation



A sample name plate for V Series.




MADE IN TURKEY

Type: VR473.1K-112M/4-L05		
Serial N.: 100348988	M. Pos.: M5	
Power: 4 kW	Ratio: 61.85	
Oil: Min. VG 320 5 lt.	Speed: 23 rpm.	
Drum Dia.: 200 mm	Falls: 4/1	
Class.: 5 ton - M5(2m) / ISO4301(FEM1.001/III)		
⊕ Lift. Sp.: 3.6 m/min.	Brake: 50	Nm.⊕

Explanations:

Type : Unit designation

Serial N : Serial number of the gearbox

M. Pos. : Mounting Position

Power : Motor Power

Ratio : Ratio of the gearbox

Oil : Type and quantity of the oil in the gearbox

Speed : Output speed of the gearbox

Drum Dia. : Diameter of the crane's drum

Falls : It is the ratio between the lifting speed and the tangential velocity of the rope at the point where it is wrapping to drum

Class : Class of the crane


Lift. Sp. : Crane's lifting speed

Brake : Brake torque

Operating Instructions


V Series

Part Designation

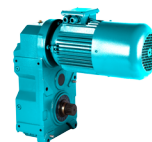

3. Standard Type Gearbox Parts List


3.1- V... Types

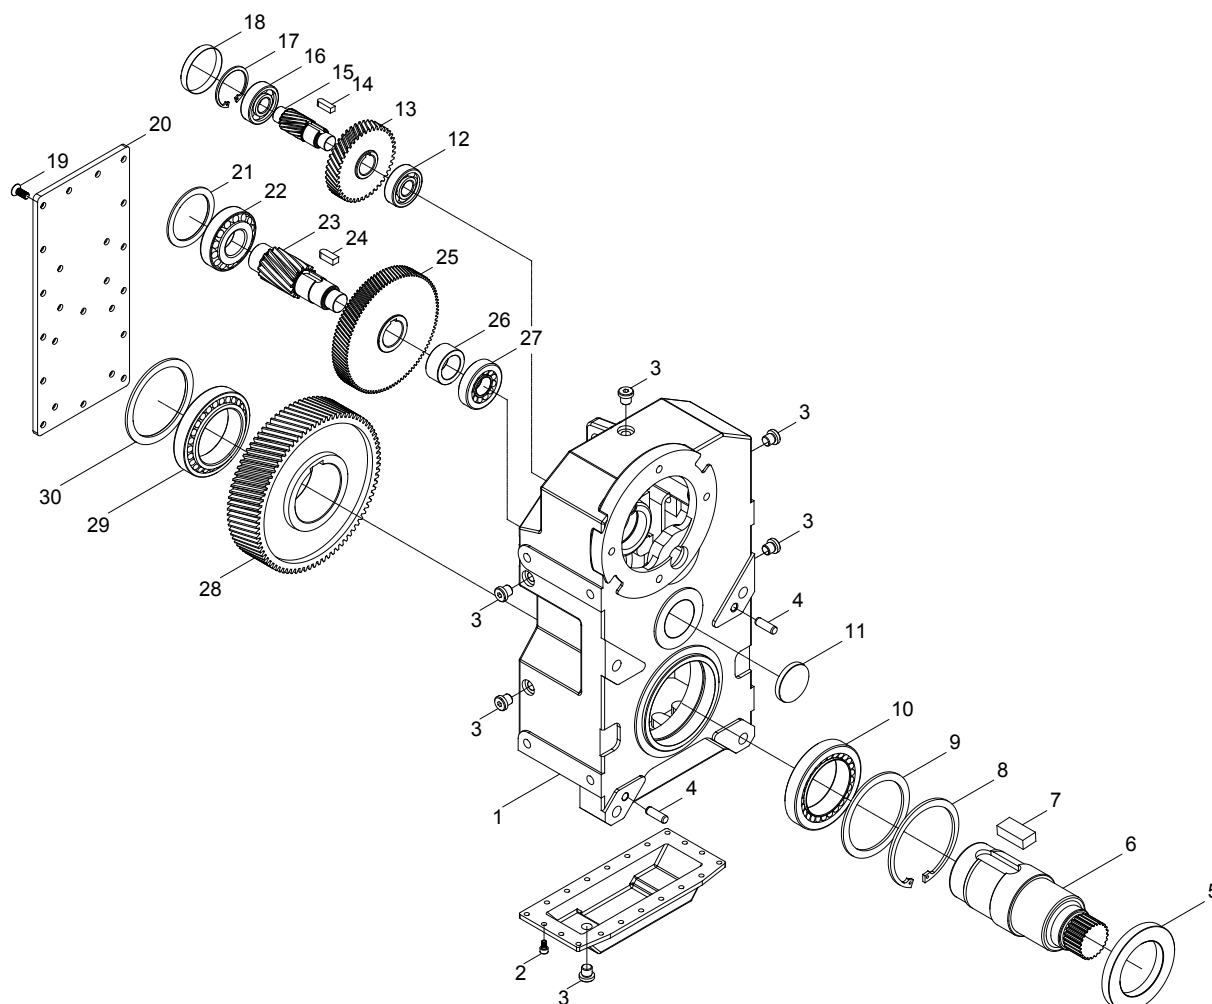

Standard V... type basic parts diagram. Parts may differ for special applications.

Standard Parts List

1- Housing	10- Bearing	19- Bolt	28- Gear
2- Bolt	11- Cover	20- Side Cover	29- Bearing
3- Plug	12- Bearing	21- Spacer	30- Spacer
4- Screw Bolt	13- Gear	22- Bearing	
5- Seal	14- Key	23- Shaft Gear	
6- Output Shaft	15- Shaft Gear	24- Key	
7- Key	16- Bearing	25- Gear	
8- Washer	17- Washer	26- Tube	
9- Spacer	18- Tube	27- Bearing	

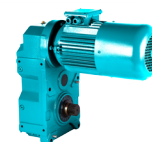

4- Safety

4.1- Intended Use

The gear reducer is designed for use in industrial machines. Please refer to our catalogue or our web page for the maximum permitted torques and speeds. The most important maximum permitted values are indicated on the nameplate of the product. But the all data can be found on our product catalogues. Using the product out of the product catalogue/ nameplate's permitted ranges will cancel the warranty/manufacturer declaration and BREVINI POWER TRANSMISSION SPA will not take any responsibility.

The gear units are intended for industrial machines and may only be used in accordance with the information provided in this manual the product catalogue and the nameplate of the gearbox. They comply with the applicable standards and regulations and meet the requirements of the directive 2006/42/EC. The gearbox must be started up, maintained and operated according this manual. The gearbox must be incorporated with 2006/42/EC confirming parts/machines.



A motor connected to the gear unit is only allowed to be operated in the frequency entries so that the data provided on nameplate/catalogue of the gear unit is not exceeded and in accordance with the nameplate/catalogue. The speed range will be provided on the nameplate if BREVINI POWER TRANSMISSION SPA is informed that the gear unit will be used with frequency inverter. If not informed the nameplate will have a single fixed speed and only this speed is allowed.

The electric motor and frequency inverter must be in accordance with 2006/42/EC



If the gear units input is used with variable speed gear unit, this must be informed to BREVINI POWER TRANSMISSION SPA before ordering and on the nameplate the allowed maximum and minimum speeds (speed range) will be provided. If not mentioned by ordering the gear units speed will be a fixed single input speed and only this speed is allowed.



If the gear unit will be driven by belt / coupling / chain drive etc. the gear unit is only allowed to be used according the nameplate/catalogue entries. Different speed, higher motor power, higher radial/axial loads etc. than nameplate/catalogue is not allowed.



The ambient temperature must be between +5 , +40 celsius and no abrasive media must attack the paint and seals. If different working conditions this must be informed to BREVINI POWER TRANSMISSION SPA before ordering.



The gearbox maintenance (oil change / check) must be done according this manual

4.2- Improper Use

Every usage which exceeds the limits stated above, the nameplate and catalogue of the product (especially higher torques and speeds) is not compliant with the regulations, and thus prohibited.

The operation of the gear reducer is prohibited if;

- It was not mounted/installed according to regulations and this manual
- The gear reducer is very soiled
- It is operated without lubricant
- It is operated out of the permitted values provided on catalogues and/or nameplate.



4.3- Safety Instructions

4.3.1- General Safety Instructions

4.3.1.1- Working on the gear reducer



- Inappropriately executed work can lead to injury or damage.

Make sure that the gear reducer is only installed, maintained and dismantled by trained technician.



- Foreign bodies spinning through the air can cause grave injury.

Before putting the gear reducer into operation, check that there are no foreign bodies or tools near the gear reducer



4.3.1.2- Operation

- Touching hot surfaces can lead to burns.

Do not touch the gear reducer if their operation temperatures are too high, or use suitable safety equipment like gloves.



-Rotating machinery can lead to injuries. There is danger of being trapped or pulled in!

Keep a sufficient distance and make safeguarding to rotating machinery. See relevant norms EN349+A1, EN13857.



4.3.1.3- Maintenance

-An unintentional start of the machine during maintenance work can lead to serious accidents.

Make sure no one can start the machine while you are working on it.



- Even a brief running of the machine during maintenance work can lead to accidents if the safety devices are not operating.

Make sure that all safety devices are mounted and active.



4.3.1.4- Lubricant

- Extended, intensive contact with oils can lead to skin irritations.

Avoid extended contact with oil, and clean oil off skin thoroughly.



- Hot oil can cause scalding.

When changing oil, protect yourself against contacting hot oil.



4.3.1.5- Ambient Conditions

- Standard gearboxes are allowed to work in ambient temperatures between +5 to +40 celsius unless differently specified on the nameplate. Using the gear unit out of this range can cause damage to the gear unit or environment. Over +40 celsius ambient conditions the gear unit surface temp could be so high causing burns when touched.



-If the gear unit will be used in outdoor applications the gear unit must be prevented from rain snow and dust. Entering substances inside the gear unit from seals can damage the gear unit. Observe the safety instructions for outdoor use EN12100:2010.

4.4- Tightening Torques

All screwed connections for which a tightening torque is specified, must on principle be tightened with a calibrated torque wrench and checked. Use the following torques for the threaded bores over the gear unit housing. For connecting elements refer to the mechanical installation part.

Bolt	Class	Tightening Torque [Nm]
M8	8.8	23
M10	8.8	43
M12	8.8	77
M16	8.8	190
M20	8.8	370
M24	8.8	640

4.5- Case of Fire

The gear reducer itself is not combustible. However, it usually contains a synthetic or mineral gear oil.

Please observe the following if the gear reducer is situated in a burning environment



4.5.1- Suitable extinguishing agents, Protective equipment

Always keep suitable extinguishing, protective equipment like carbon dioxide, powder, foam, fog easy accessible around the gear unit.



-High temperatures produce irritating steam.

Use a protective breathing apparatus.

4.5.2- Unsuitable extinguishing agents

Do not spray with water!



5 -Things to Check Before the Gear Unit or Geared Motor is Installed



If gear motors are used, please also refer to the manual of the motor manufacturer.

Before you install the gearbox you have to be sure that the gearbox is arrived with the all necessary equipment and without damage. Think to take into consideration before you start to install the unit;

- You have received the correct operation manual of the your product.
- The gearbox and all its parts are transported without damage.
- The gearbox is stored correctly according the instructions in this manual
- You have the latest product catalogue or you have access to our web page

5.1- Transportation

When the goods arrive, first check for any damage. If some damage observed, immediately contact the transport company and inform about the damage. Contact BREVINI POWER TRANSMISSION SPA for the damage and do not start to install the unit until it is agreed that the damage has no affect of operation.



Use the upper foot connection holes for lifting up the gear unit by using eyebolts. The eyebolts should be capable to carry the weight of gearboxes. Do not hang additional loads on the gear box by lifting. Use suitable hoisting equipment which is capable to hold the gear units weight. Refer to the catalogue for various types weights. If the gearbox is delivered with steel carrying construction use the construction holes for lifting the gear unit. See drawing below for hoisting point.




Do not stay beneath / under the lifting/hoisting equipment which may cause serious injuries by falling down objects, accidental movements, unexpected accidents.



Falling or hard placement can damage the gear unit.

Only use hoisting and securing equipment which is permitted for the size / weigh of your gear unit. Ensure that the load is slowly and carefully handled and placed.

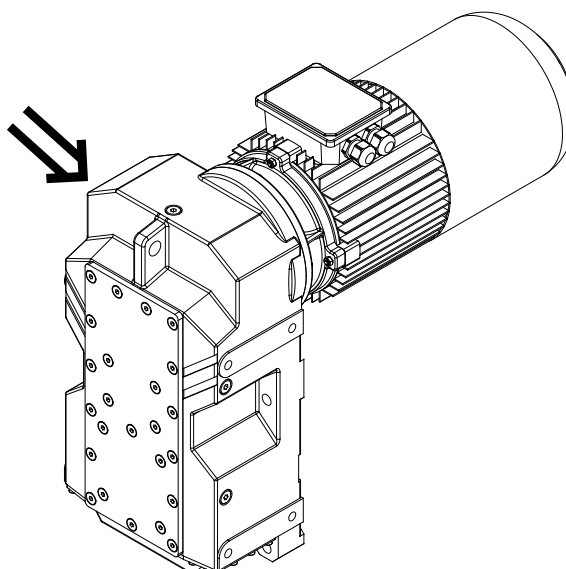



5.2- Storage

If the geared unit or geared motor will be stored up to 3 years refer to the following instructions;

With Packing;

-Use corrosion protection oil for the output shaft and connection surfaces like flange surface or foot assembling surface. Seal the unit in a plastic wrap and pack it in container. A moisture indicator should be placed around the container to observe the moisture. Relative atmospheric humidity should not exceed 50%. The container should be kept under roof which protects from snow and rain. Under this condition the gear unit can be stored up to 3 year with regular check. The ambient temperature should be between -5 to 60 Celsius degrees

Without Packing;

-Use protection oil for the output shaft and connection surfaces like flange surface or foot assembling surface. If no packing is used and the gearbox is stored without packing, the ambient temperature should be between 5 to 60 Celsius degrees. The gearbox must be kept under enclosed roof with constant temperature and constant humidity not exceeding 50%. The storage should be free of dust and dirt and ventilated with filter. If the gearbox is stored without packing it is recommended not to store more than 2 years and regular check during this time is recommended.

If stored in open areas protect against insect damage.

6- Installing The Gear Unit

6.1- Before you start;


- Observe the gear unit for damages of storage or transportation. If any damage please contact BREVINI POWER TRANSMISSION SPA.
- Be sure that you have all the equipment necessary for installing like; Spanners, torque wrench, shims and distance rings, fixing devices for input and output elements, lubricant, bolt adhesive etc.



- This manual is not for 94/9/EC (ATEX) conforming gear units. For 94/9/EC conforming gear units refer to the ATEX range manual. ATEX conforming gear units have name plates indicating the zone and the temperature class and are different from standard type geared units. Therefore Standard units can not be installed on Potentially explosive atmospheres.



6.2- Check Splined Shaft Dimensions and Tolerances

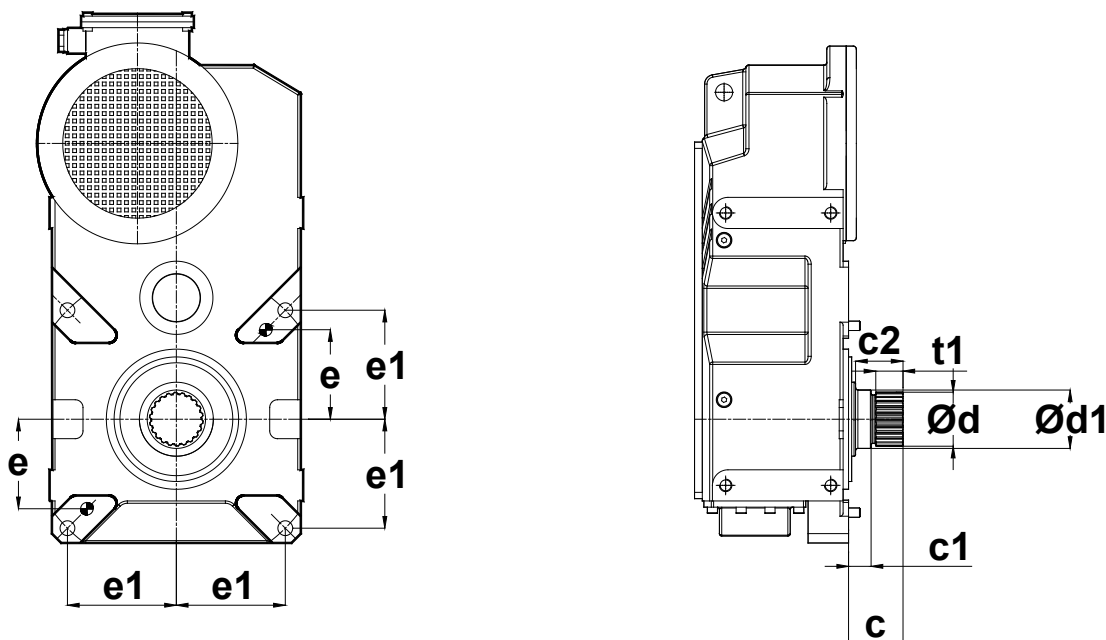

Type	Splined Shaft Dimensions						
	e	e1	c	c1 c2	d	d1	t1
V373.1K	75	90	55	22 48	W45x2x30x21x8f DIN5480	ø50 (h6)	28
V373.1L			50	22 43	W40x2x30x18x8f DIN5480	ø43 (h6)	23
V473.1K	95	110	60.5	27 51,5	W50x2x30x24x8f DIN5480	ø55 (h6)	28
V473.1L			48	16 42	W45x2x30x21x8f DIN5480	ø48 (h6)	27
V573.1K	115	140	69	28 61	W70x3x30x22x8f DIN5480	ø75 (h6)	35
V573.1L			56	16 51	W65x2x30x31x8f DIN5480	ø68 (h6)	35
V673.1K	132.5	157.5	84	32 74	W95x3x30x30x8f DIN5480	ø100 (h6)	45
V673.1L			67	17 60	W75x2x30x36x8f DIN5480	ø78 (h6)	44
V673.1M			75	21 68	W90x2x30x44x8f DIN5480	ø92 (h6)	45
V773.1K	160	187.5	110	35 97	W110x4x30x26x8f DIN5480	ø115 (h6)	67
V773.1L			97	21 89	W110x2x30x54x8f DIN5480	ø113 (h6)	67



6.3- Check Drum Connection Flange (Optional) Dimensions and Tolerances

Type	Drum Connection Flange Dimensions
V373 GN25.V37.FK	N45x2x30x21x9H DIN5480
V473 GN25.V47.FK	N50x2x30x24x9H DIN5480
V573 GN25.V57.FK	N70x3x30x22x9H DIN5480



Type	Drum Connection Flange Dimensions
V673 GN25.V67.FK	
V773 GN25.V77.FK	

6.4- Check the ambient temperature;

The ambient temperature must be between +5 celsius to +40 celsius for standard type gear units. If different contact BREVINI POWER TRANSMISSION SPA for special solutions.

6.5- Check the voltage supply;

The standard geared motors are supplied with 230/400 V 50/60Hz. up to 3kW including 3kW and 400/690 V 50/60 Hz. over 3kW and is indicated on the motors name plate unless it is differently ordered. In case of only gear unit is supplied from BREVINI POWER TRANSMISSION SPA please observe the name plate of the electric motor and the instructions of the supplier. Check the basic electric connection diagrams below. Use experienced electric technician.



Using wrong connection or voltage can damage the electric motor or environment.

Operating Instructions

V Series

Electricity




The following wiring diagram is for standard 230/400 V 50Hz AC electric motors. For different voltages please contact BREVINI POWER TRANSMISSION SPA. For gear units supplied without motor, refer to the motor manufacturers user manual.

The electric connection must be done by experienced electric technician.

The gearbox, the motor and the brake must be grounded to prevent potential differences of earth and gearbox/motor.

Pole Number	Nominal Power at 400V, 50Hz	
	230V (Δ) / 400 V (Y)	400V (Δ)
2 or 4	≤ 3 kW	≥ 4 kW
6	$\leq 2,2$ kW	≥ 3 kW
8	$\leq 1,5$ kW	$\geq 2,2$ kW
Starting Principle	Direct	Direct or Y/ Δ

Basic motor connection wiring diagram

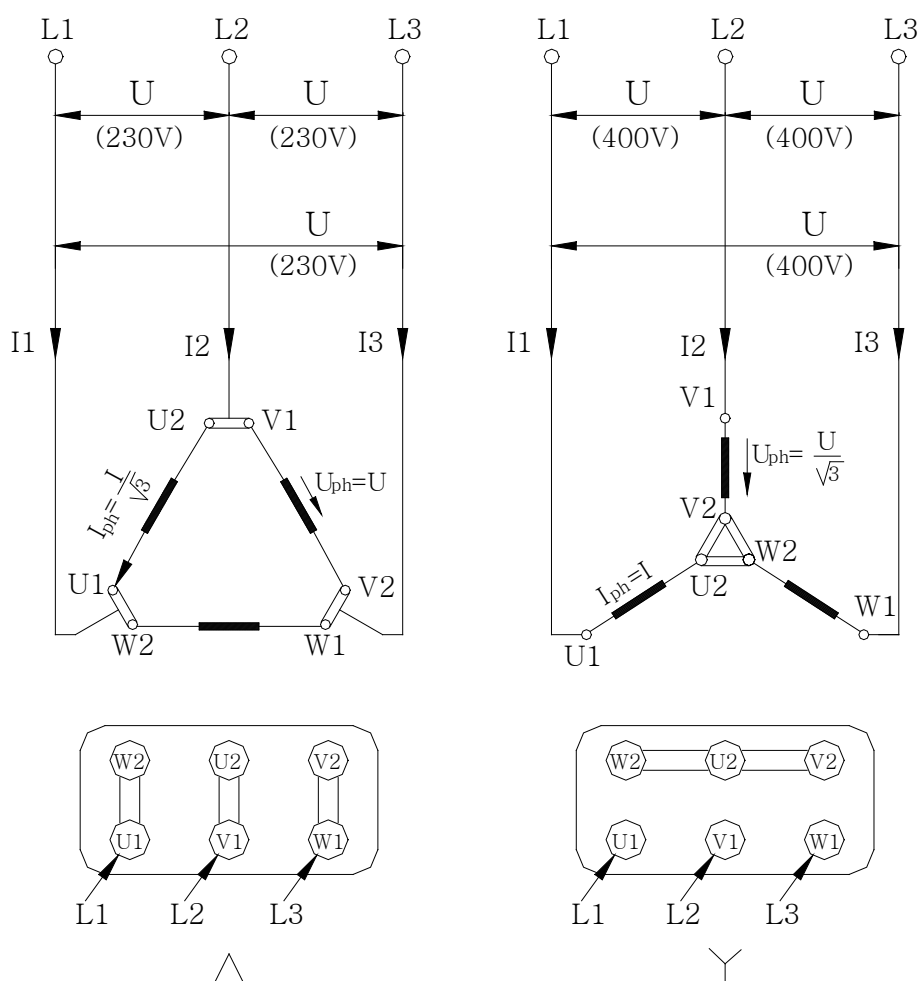




Standard type brakes basic wiring diagram




The electric connection must be done by experienced electric technician.

The gearbox and the motor must be grounded to prevent potential differences of earth and gearbox/motor.


Delayed Running Brake(380 V)

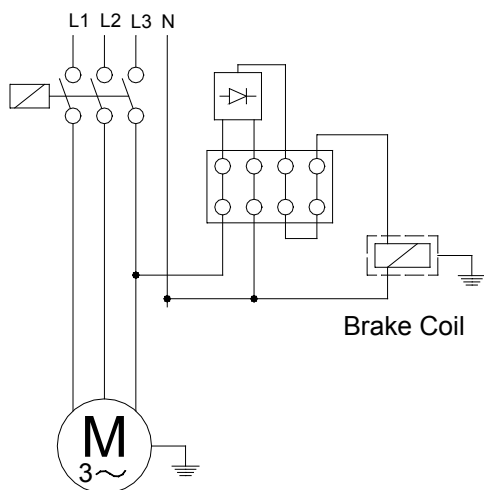


Sudden Brake (380 V)

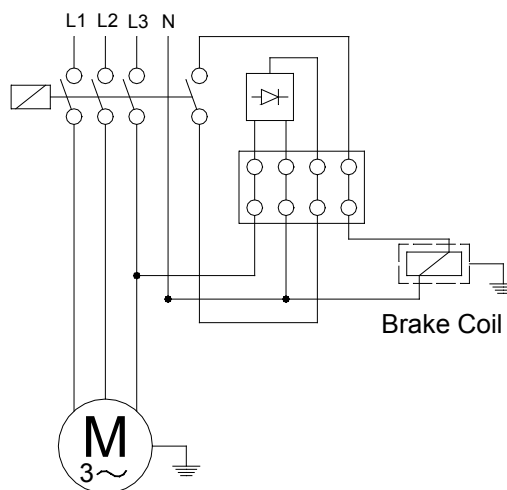

Delayed Running Brake (24 V)

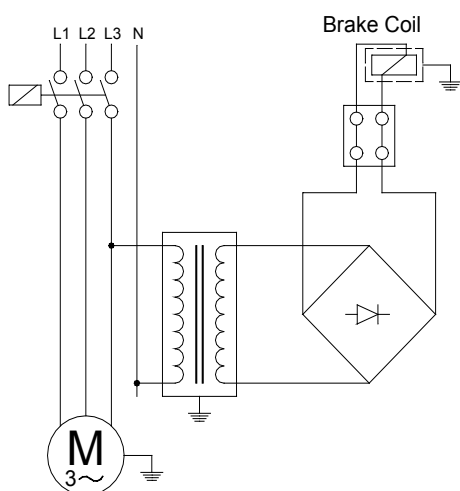

Sudden Brake(24 V)

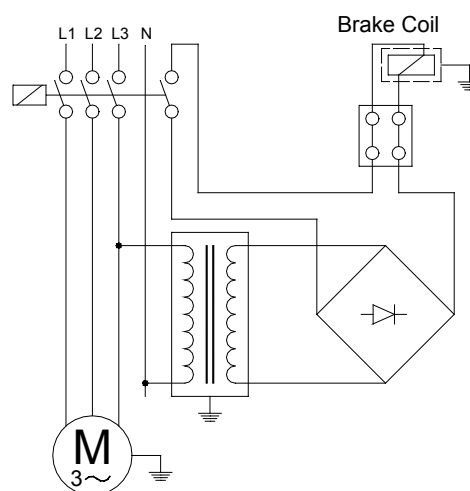



6.6- Check the mounting position;

The mounting position must be in accordance with the mounting position mentioned on the name plate. If different please contact BREVINI POWER TRANSMISSION SPA for possibilities of using in a different mounting position. Refer to the mounting positions and oil quantities on this manual and adjust the oil level accordingly with the recommended oil types given on this manual.



Do not mix synthetic oils with mineral oils which can cause serious damage on the gear unit.

6.7- Use of breather plug;

Breather plugs are not needed for M Series under normal ambient and working conditions (Up to 30 degree Celsius ambient temperature and up to 8 hours per day) . If heavy ambient conditions and long time working hours then breather plug are recommended by BREVINI POWER TRANSMISSION SPA and delivered with the gearbox together. Replace the breather plug with the most top plug according to your mounting position.



Some plug positions are not machined according mounting position. If no mounting position is mentioned by ordering the standard M5 position plugs are machined.

6.8- Check the oil level ;

On the mounting position tables the oil level plug is shown. Please refer to those tables and be sure that the oil level is correct according the mounting position by screwing half way out the level plug and see if oil comes out from that plug. If oil comes out tighten the plug again. If no oil comes out take out the filling plug and add oil until oil comes out from the level plug and tighten both plugs after finish. Be sure you are using the correct oil mentioned on the oil tables on this manual.



Do not mix synthetic oils with mineral which can cause serious damage on the gear unit.

6.9- Check shaft ends and mounting faces;

Before you start to installing be sure that all the connection elements are free of oil and dust. The output shaft may be protected by anti-corrosion oil. Please remove this using available solvents on your market. By using this do not touch sealing lips or painting of the housing.

6.10- Cover abrasive ambient;

If the gear unit will be placed on a abrasive ambient be sure that the output seals are covered so that no abrasive material, chemicals or water touches the seals. Any pressure coming from outside over the seals can cause that the out staying substances to enter the gearbox and cause serious damage to the gear unit. If pressure or abrasive material can not be prevented from coming over the sealing, contact BREVINI POWER TRANSMISSION SPA for solutions.

Abrasive material, chemicals, water, positive or negative pressure exceeding 0,2 bar can affect or damage the sealing lip or output shaft. Inside entering substances from the seals can cause serious damage to the gear unit.



6.11- Check accessibility to filling, breather and drain plugs;

The filling, breather and drain plugs must be freely accessible for further checking and service.

7- Mechanical Installation

The gear unit can only be installed using the supplied connection points like foot and flange assembling points.



To install the gear unit without the supplied connection points can cause serious injuries by loosening or braking the gear unit. Even the gear unit is installed totally correctly according this Manuel, be sure that no one will be harmed by accidentally brake downs or loosening.

The mounting plate must be rigid enough not allowing torsions, flat enough to prevent strains by tightening the bolts and stable enough not allowing vibrations. By using chain drives this becomes much more important because of the polygon effect on chain drives. According to your connection elements the maximal permitted radial and axial load of the gear unit must be in accordance with your application. Check the product catalogue for permitted radial loads and calculation.



If the output or input shaft is overloaded by radial or axial loads it can cause serious damage to the gear unit.

Secure the gear unit using 8.8 or higher quality bolts.




Cover all the turning parts from human entering or touching. Turning parts can cause severe or fatal injuries.

For different kind of basic installations refer to the following illustrations.




7.1- Fitting output shaft elements

Use the following illustration to assemble output shaft units

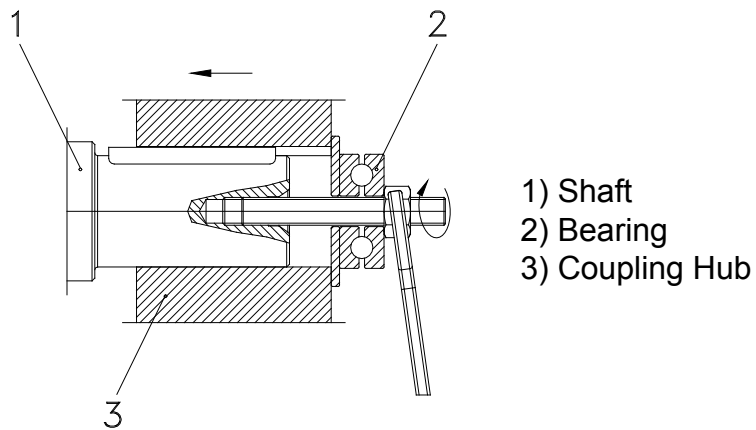

7.2- Correct position of output shaft elements


The Output Shaft unit (transmission elements) must be placed as close as possible to the gear unit so that the radial load is as close as possible to the gear unit.

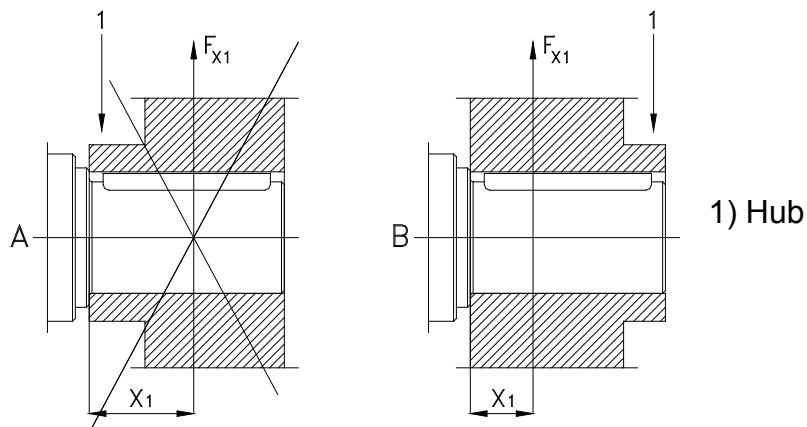




7.3- Fitting Couplings


7.3.1- By fitting couplings be sure that there is some clearance between the two elements

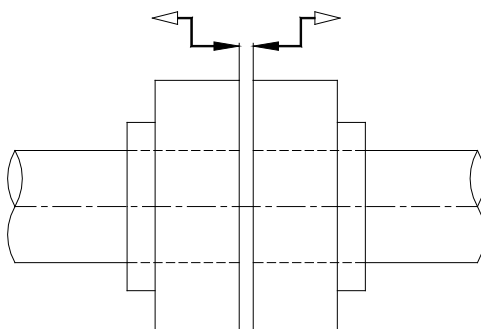

7.3.2- By fitting couplings be sure that there is no eccentricity between the two shafts.

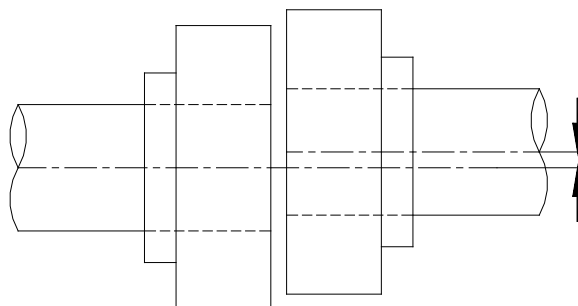

7.3.3- By fitting couplings be sure that the two shafts are not angular miss-aligned

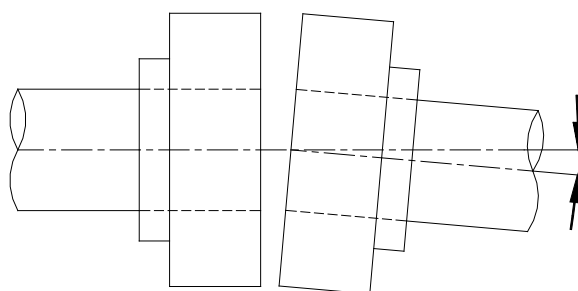




8- Maintenance and Inspections

Under normal ambient and working conditions the gear unit should be checked according the following intervals. (For definition of normal working conditions refer to the product catalogue: "Selecting Gearbox" section);

Item to check / replace	Every 3.000 working hours or every 6 months	Every 4.000 working hours	Every 10.000 working hours or every 3 years	Every 25.000 working hours
Check for oil leakage	x			
Check for oil level	x			
Check oil leakage from seal	x			
Check Rubber buffer	x (Change if necessary)			
Check Bearings Noise		x (Change if necessary)		
Change Mineral Oil			x (See Below for details)	
Change Synthetic-PAO Oil				x (See Below for details)
Change Sealing				x
Change Bearing Grease				x
Change Bearings				x
Check for noise Changes				x

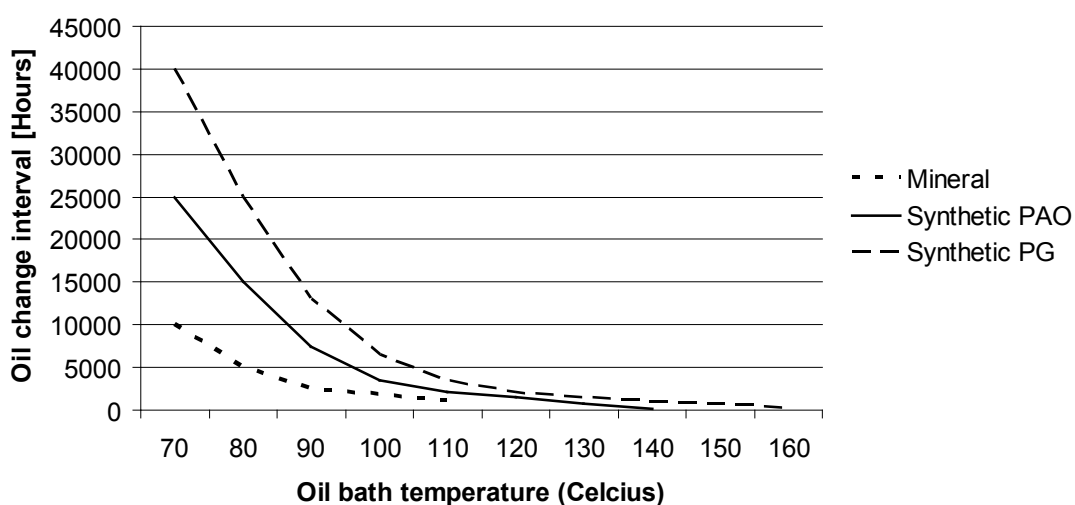

For normal ambient conditions 70 degrees Celsius oil bath temp. Should be taken as reference

* For V series Mineral oil is used unless it is differently ordered. For oil type and quantities refer to the following tables.

Operating Instructions

V Series

Lubrication



9- Lubrication

9.1- Oil Types

Lubricant	DIN 51517-3	Ambient Temperature [°C]		ISO VG	Beyond Petroleum	Castrol	Klüber Lubrication	Mobil	Shell
		Dip Lubrication	Forced Lubrication						
Mineral Oils	CLP	0 ... +50	–	680	Energol GR-XP 680	Alpha SP 680	Klüberoil GEM 1-680 N	Mobilgear XMP 680	Omala 680
		-5 ... +45	–	460	Energol GR-XP 460	Alpha SP 460	Klüberoil GEM 1-460 N	Mobilgear XMP 460	Omala F460
		-10 ... +40	+15 ... +40	320	Energol GR-XP 320	Alpha SP 320	Klüberoil GEM 1-320 N	Mobilgear XMP 320	Omala F320
		-15 ... +30	+10 ... +30	220	Energol GR-XP 220	Alpha SP 220	Klüberoil GEM 1-220 N	Mobilgear XMP 220	Omala F220
		-20 ... +20	+5 ... +20	150	Energol GR-XP-150	Alpha SP 150	Klüberoil GEM1-150 N	Mobilgear XMP150	Omala 150
		-25 ... +10	+3 ... +10	100	Energol GR-XP 100	Alpha SP 100	Klüberoil GEM 1-100 N	–	Omala 100
Synthetic Oils	CLP PG	-10 ... +60	–	680	Energysyn SG-XP 680	–	Klübersynth GH 6 -680	Mobil Glygoyle 680	Tivela S 680
		-20 ... +50	–	460	Energysyn SG-XP460	Aphasyn PG460	Klübersynth GH 6-460	Mobil Glygoyle 460	Tivela S 460
		-25 ... +40	+5 ... +40	320	Energysyn SG-XP320	Aphasyn PG320	Klübersynth GH 6-320	Mobil Glygoyle 320	Tivela S 320
		-30 ... +30	0 ... +30	220	Energysyn SG-XP 220	Aphasyn PG 220	Klübersynth GH 6-220	–	Tivela S 220
		-35 ... +20	-5 ... +20	150	Energysyn SG-XP 150	Aphasyn PG 150	Klübersynth GH 6 -150	–	Tivela S 150
		-40 ... +10	-8 ... +10	100	–	–	Klübersynth GH 6 -100	–	–
	CLP HC	-10 ... +60	–	680	–	–	Klübersynth GEM4-680 N	Mobilgear SHCXMP680	–
		-20 ... +50	–	460	Energysyn EP-XF 460	Alphasyn T 460	Klübersynth GEM4-460 N	Mobilgear SHC XMP460	Omala HD 460
		-25 ... +40	+5 ... +40	320	Energysyn EP-XF 320	Alphasyn T 320	Klübersynth GEM4-320 N	Mobilgear SHC XMP 320	Omala HD 320
		-30 ... +30	0 ... +30	220	Energysyn EP-XF 220	Alphasyn T 220	Klübersynth GEM4-220 N	Mobilgear SHC XMP 220	Omala HD 220
		-35 ... +20	-5 ... +20	150	Energysyn EP-XF 150	Alphasyn T 150	Klübersynth GEM4-150 N	Mobilgear SHC XMP 150	Omala HD 150
		-40 ... +10	-8 ... +10	100	–	–	Klübersynth GEM4-100 N	–	–
Food Grade Oil	CLP NSF H1	-15 ... +25	+5 ... +25	320	–	Optileb GT 320	Klüberoil 4 UH1-320 N	Mobil SHC Cibus 320	Cassida Fluid GL-320
Bio degra- dable Oil	CLP E	-25 ... +40	+5 ... +40	320	–	Tribol BioTop 1418-320	Klübersynth GEM 2-320	–	–
Mineral Greases [-20 +120 Working Temperatures °C]					Energrease LS 3	Spheerol AP3	Centplex 2 EP	Mobilux EP 3	Alvania RL3
Synthetic Greases [-30 +100 Working Temperatures °C]					Energrease SY 2202	–	Petamo GHY 133 N	Mobiltemp SHC100	Cassida RLS 2



9.2- Changing the Oil

Refer to the nameplate to find out the correct oil type filled inside the gearbox.



- Do not mix synthetic oils with mineral oils which will cause serious damage to the gear unit. The oil change must be done by using the filling, draining and level plugs according the mounting position illustrated at oil plugs tables.



- Extended, intensive contact with oils can lead to skin irritations. Avoid extended contact with oil, and clean oil off skin immediately.



- Hot oil can cause scalding. When changing oil, protect yourself against contacting hot oil, use protective gloves.


Operating Instructions

V Series

Lubrication



9.3- Oil Levels,Plugs and Quantities

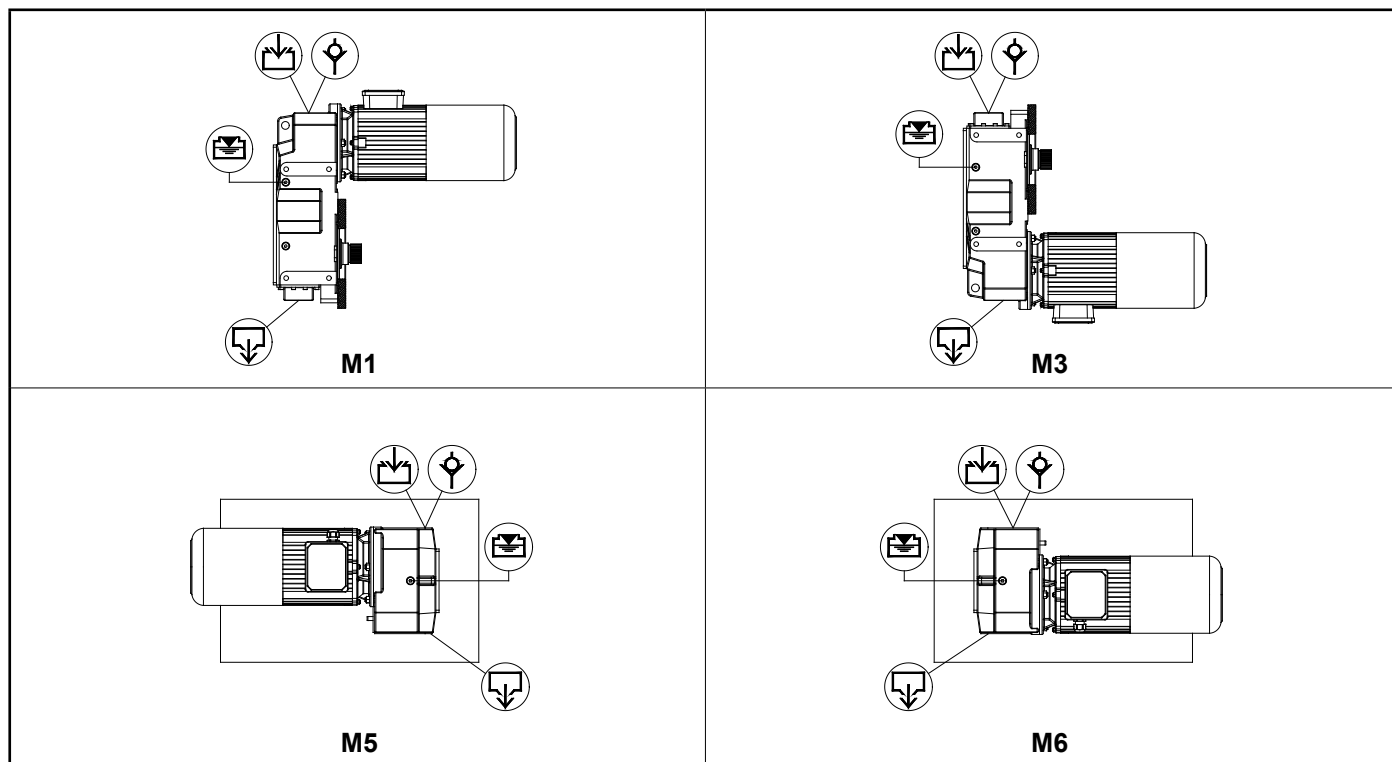

Oil Quantities (lt)

Tip	V Series Oil Quantities (lt)			
	M1	M3	M5	M6
V373	3,3	2,6	2,6	2,5
V473	4,5	4,1	4,3	4,1
V573	9,7	7,9	9,2	9,0
V673	16,3	13,6	16	15,8
V773	30	18	21	20,7

Symbols :



:Oil filling



:Drain plug



:Oil level




:Vent Plug



9.4- Mounting Positions

V Series

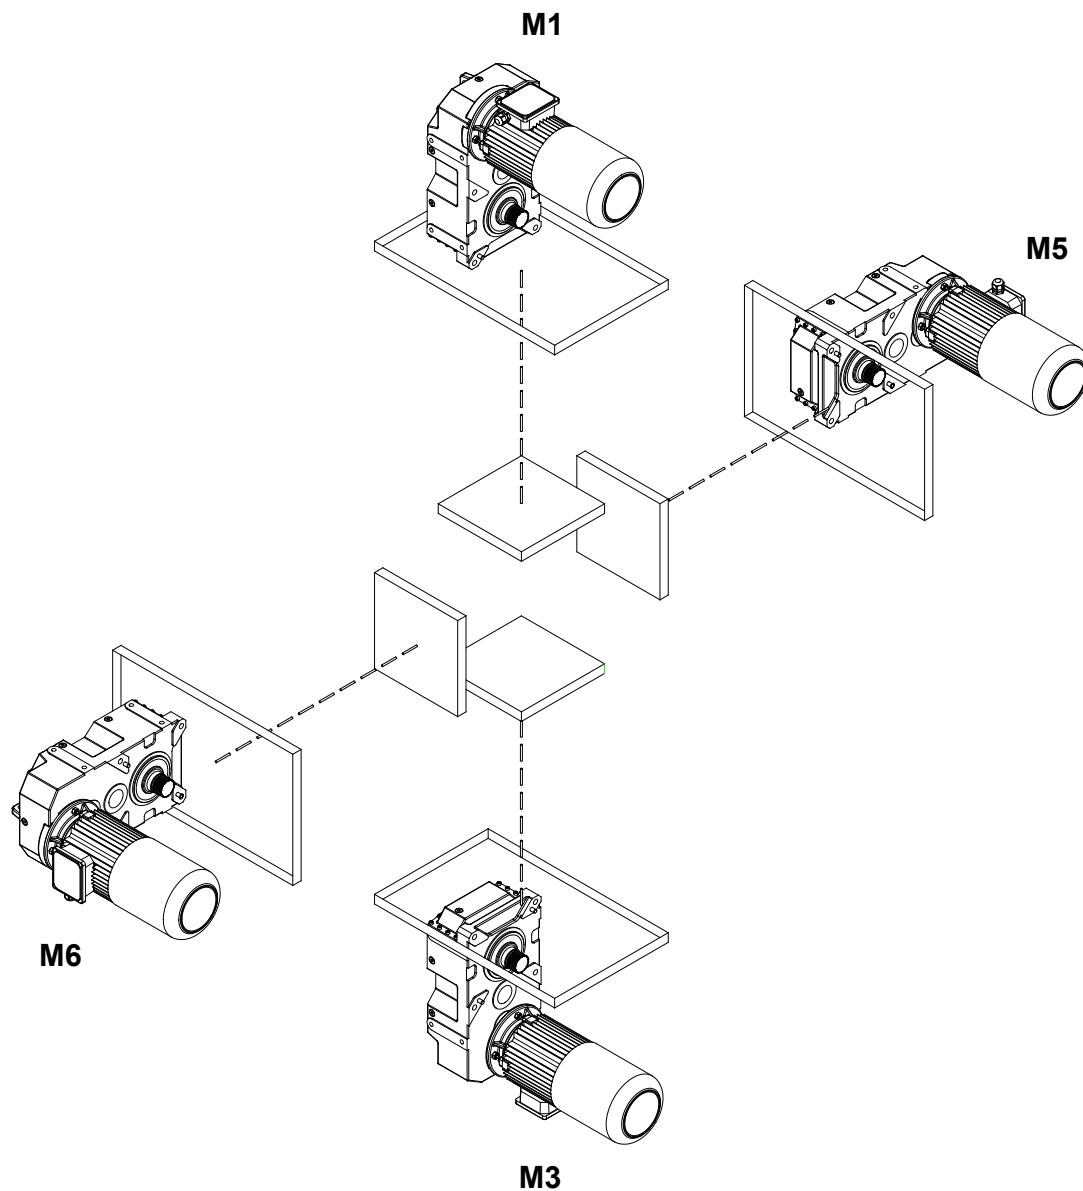

*Indicated mounting positions are determined as reference directional position of the gearbox.
Mounting surfaces are not binding.*



10- Troubleshooting Guide



All the operations bellow must be done by authorized and skilled mechanician /electrician. Inform BREVINI POWER TRANSMISSION SPA before making any change to the gearbox. Only oil change is allowed to change without information. Do not make anything if you are not sure what you are doing and contact BREVINI POWER TRANSMISSION SPA. Any change or operation done without the information of BREVINI POWER TRANSMISSION SPA is in your own risk and responsibility and BREVINI POWER TRANSMISSION SPA does not take any responsibility.

ID	Problem	Observation	Remedy
001	Gearbox Does Not Start Up	You hear no noise and shaft is not turning. You are not using any driver or frequency inverter.	Please Check the voltage supply and frequency of your electric connection. They must be in accordance with the nameplate of the motor. Observe motor manufacturers start up manual. Still does not work go to ID 100
002	Gearbox Does Not Start Up	You hear no noise and shaft is not turning. You are using frequency inverter or driver.	Please observe the frequency inverter/driver manual. Check the motor by supplying direct voltage to see if the problem is on your driver/frequency inverter. Still does not work go to ID 001.
003	Gearbox Does Not Start Up	You hear some noise but both motor shaft and gearbox shaft is not turning. You are not using any driver /frequency inverter or braked motor.	Please Check the voltage supply and frequency of your electric connection. They must be in accordance with the nameplate of the motor. Observe motor manufacturers start up manual. Still same problem, the load may be too high for the chosen motor. Loosen the gearbox from the load/torque. If it works than the starting torque is insufficient and higher motor power is needed. For mono phase motors, check the starting up condensator and running condensator as well. If nothing helps go to ID 100
004	Gearbox Does Not Start Up	You hear some noise but both motor shaft and gearbox shaft is not turning. You are using driver or frequency inverter.	Please observe the frequency inverters or drivers manual. To see if the problem is on your driver or frequency inverter take out the driver/frequency inverter and make direct voltage supply to the motor according the motors nameplate. Still does not work go to ID 100
005	Gearbox Does Not Start Up	You hear some noise but both motor shaft and gearbox shaft is not turning. You are using braked motor	Please Check the voltage supply and frequency of your electric connection. They must be in accordance with the nameplate of the motor. Observe motor manufacturers start up manual. Be sure that the brake is working. Observe the brake manufacturers manuel. If brake is supplied from BREVINI POWER TRANSMISSION SPA observe this manuel for correct brake wiring diagram. If still not work supply the brake with voltage according its nameplate directly. For example 198 V DC. You will hear a clicking noise explaining that the brake is opening. If you hear no noise the brake or rectifier is defect. If you hear the clicking noise the brake is working. You should this clicking noise by your normal electric connection as well. By supplying direct supply to the brake you hear the clicking noise and at same time you supply the motor with direct voltage according to its name plate and still same problem, the load may be too high for the chosen motor. Go to ID 003.

Operating Instructions

V Series

Troubleshooting Guide



ID	Problem	Observation	Remedy
006	Gearbox Does Not Work in Low speeds / Frequencies.	You are using frequency inverter.	For very low speeds the frequency inverter frequency is lowering down. For very low frequencies the inverter parameter and motor parameter must be optimise. Also for low speeds the efficiency of the gearbox may vary too much. Specially for worm-gearboxes. The recommended frequency range is 20-70 Hz for worm-gearboxes and 10-70 Hz for Helical Gear Boxes. Use Higher motor power and Frequency inverter or change ratio of gearbox to work inside the recommended range.
007	Gearbox Does Not Start Mornings or After Long Time Stop.	Ambient Temperature is below +5 Celsius	The oil is not in accordance with your working conditions. Change to lower viscosity oils. Observe this manual for using the correct oil. Working in higher ambient temperatures is an other solution if possible. If still same problem you need higher motor power.
008	Gearbox is Heating Up too Much	You are using Worm Gear Box and ambient temperature is lower than +40 Celsius	Measure the surface temp. using a temperature measuring device under full load. If the temp is under +80 Celsius this will make no harm to the gearbox and is normal. All ATEX conforming gearboxes and standard worm gearboxes are designed to work under max. +120 Celsius. <u>If higher than +120 Celsius and using ATEX conforming gear box immediately stop the system and contact BREVINI POWER TRANSMISSION SPA.</u> Go to ID 100. If not ATEX confirming check the oil type and oil quantity/level according your mounting position and check the nameplate mounting position. If nameplate mounting position does not fit the actual position go to ID 100.
009	Gearbox is Heating Up too Much	You are using Helical Gear Box. Ambient temp is lower than +40 Celsius	Measure the surface temp. using a temperature measuring device under full load. If the temp is under +80 Celsius this will make no harm to the gearbox and is normal. All ATEX conforming gearboxes are designed to work under max. +120 Celsius. <u>If higher than +120 Celsius and using ATEX conforming gear box immediately stop the system and contact BREVINI POWER TRANSMISSION SPA.</u> If not ATEX gearbox the gearbox is designed to work under max. +80 Celsius. If higher than +80 Celsius check the oil type and oil quantity/level according your mounting position and check the nameplate mounting position. If nameplate mounting position does not fit the actual position go to ID 100
010	Gearbox is Heating Up too Much	Ambient Temp is over +40 Celsius	Standard Gearboxes are designed to work under +40 Celsius. ambient temperature. If ambient temp is higher than +40 Celsius special solutions/gearboxes are required. Please contact BREVINI POWER TRANSMISSION SPA
011	Gearbox is noisy	Noise is regular continuous	Check Your moving parts for noise. Disassemble the gearbox and run without load. If you still hear the noise motor bearings or gearbox bearings are defect. Change bearings. Go to ID 100
012	Gearbox is noisy	Noise is random	Check Your moving parts for noise. Disassemble the gearbox and run without load. If you hear still the noise the oil may has some particles inside. Change the oil and look for small particles. If metal particles are found the gearbox may have some damage. Goto ID 100

Operating Instructions

V Series

Troubleshooting Guide



ID	Problem	Observation	Remedy
013	Gearbox is noisy	Regular knocking noise	Check Your moving parts for noise. Disassemble the gearbox and run without load. If you still hear the noise one of the gears inside is defect. Go to ID 100
014	Gearbox is noisy	Regular up and down noise	Check the output-shaft connection elements for run out. Take out the output shaft element and run without load. If you still hear the noise one of the gears has run out problem. Go to ID 100
015	Gearbox is noisy	Gearbox is with braked motor and noise is coming from the brake side randomly.	Low randomly clicking noise may come from the brake disk which is normal. If noise level is disturbing the brake may be defect or brake clearance is not adjusted. Go to ID 100
016	Gearbox is noisy	You are using frequency inverter and the noise level is changing according your speed.	The frequency inverter parameters are not optimise for the frequency range or motor you are using. Observe the frequency inverters manual. If still same problem change the ratio of gearbox. Go to ID 100
017	Oil is Leaking	Oil Leakage from Seal	If ambient Temp is over +40 Celsius or none stop work over 16 hours please change the top plug with a breather plug. Observe this manual for using breather plug. If this is not your case the seal could be damaged. Go to ID 100
018	Oil is Leaking	Oil Leakage from Plug	If you are using breather plug be sure it is in the correct place. This is the most top plug position according your mounting position. The plug may be not tight enough. There are some particles under the plug rubber surface. Clean and tighten the plug. If still same problem go to ID 100
019	Oil is Leaking	Oil Leakage from Housing	Observe exactly where the oil is coming out. It could be seal or plug point where it comes out and leaks over the housing. If this is your case go to ID 018/019. If you are sure oil comes out from housing than housing has some micro split / crack. Go to ID 100
020	Oil is Leaking	Oil Leakage from Cover	The sealing liquid under cover is split/defect. Disassemble the cover and put new sealing liquid. Assemble the cover and tighten the bolts. If still same problem go to ID 100
021	Gearbox is moving regularly on its mounting point	You are using Torque Arm	The movement of gear box is because of the run out of the shaft which you assemble the gearbox. This has no bad affect or harm to the gearbox and is normal unless you are using torque arm.
022	Gearbox is moving randomly on its mounting point	You are using Torque Arm	The movement of gear box is because of the run out and clearance of the shaft which you assemble the gearbox. Check the clearance of the assembling shaft and the clearances on your machine. This has no bad affect or harm to the gearbox unless you are using torque arm.
023	Motor is heating up	Motor is running over its nominal current	The motor power is not enough or some overload to the motor is possible. The motor may be defect. Go to ID 100
023	Motor is heating up	Ambient is dusty	Check the motor Fan Hub and ribs. They must be free of dust. If you are using forced external fan, check if it is working. If you are using frequency inverter in low speeds and you do not have forced external fan, you may need forced external fan. Go to ID 100

Operating Instructions

V Series

Troubleshooting Guide



ID	Problem	Observation	Remedy
024	Motor is running but Gearbox shaft does not turn	Scratching noise comes out	Some part (key, gear) may be defect inside gearbox. Go to ID 10
025	Gearbox Housing is Defect	You are using chain drive or pinion gear	The radial load or polygon effect of the chain may have caused the damage. Check also if the assembly bolts are loosened or the plate you assemble the gearbox is rigid enough. Check if you are using the correct diameter of chain drive and you are not exceeding max. allowed radial load. Check the position of your output element and re-calculate your radial load and check if this fit to the maximum allowed radial load. Go to ID 100
026	Output Shaft is Defect	You are using chain drive or pinion gear	The radial load or polygon effect of the chain may have caused the damage. Check also if the assembly bolts are loosened or the plate you assemble the gearbox is rigid enough. Check if you are using the correct diameter of chain drive and you are not exceeding max. allowed radial load. Check the position of your output element and re-calculate your radial load and check if this fit to the maximum allowed radial load. Go to ID 100
027	Gearbox is stopping too late	You are using braked motor	Please check the wiring diagram of the brake. There are two different kind of brake wiring diagram. The standard gearbox delivered from our factory is set to delayed braking. For sudden braking check the wiring diagram.
028	Gearbox is starting too late	You are using braked motor	For fast opening of big brakes (over 100 Nm), you may need shock transformers which is supplied by BREVINI POWER TRANSMISSION SPA. Go to ID 100
100	Service Required	No self solution found	Please contact BREVINI POWER TRANSMISSION SPA Service point. See on the back side of this manual. Changing mechanical parts of gearbox can only be done by BREVINI POWER TRANSMISSION SPA or with information of BREVINI POWER TRANSMISSION SPA. Any change without informing BREVINI POWER TRANSMISSION SPA will cancel the warranty, manufacturer declaration and BREVINI POWER TRANSMISSION SPA will take no responsibility.

11- Disposal

If your product is no longer of use and you wish to dispose it, refer to the instructions here. If you have any questions regarding ecological disposal methods, please consult our service points given on the backside of this manual.

11.1- Disposal of Oil

Lubricants (oil and greases) are hazardous substances, which can contaminate soil and water. Collect drained lubricant into suitable receptacles and dispose of it according to the valid national guidelines.

11.2- Disposal of Sealing

Remove the sealing rings from the gear reducer, and clean them of oil and grease residues. Dispose of the sealing as composite material (metal/plastic)

11.3- Disposal of Metal

Divide up the remainder of the gear reducer into iron, aluminium, non-ferrous heavy metal if possible. Dispose of it according to the valid national guidelines.

This image shows a full page of blank graph paper. The grid consists of small, equal-sized squares formed by thin black lines. There are no margins, text, or other markings on the page.

brevini
power
transmission

NETWORK

ITALY

Brevini Centrosud

00012 - Guidonia Montecelio (Roma) - ITALY
Tel.: +39 - 0774 - 365246
www.brevinicentrosud.it

Emilia Romagna-Marche

40012 - Lippo di Calderara di Reno (BO) - ITALY
Tel.: +39 - 051 - 725436
www.brevini.com

Lombardia

24050 - Lurano (BG) - ITALY
Tel.: +39 - 035 - 800430
www.brevinilombarda.it

Piemonte

10143 Torino (TO) - ITALY
Tel.: +39 - 011 7492045
www.brevini.com

Sicilia

91025 Marsala (TP) - ITALY
Tel.: +39 - 0923 - 719721
www.brevini.com

Veneto

45021 - Badia Polesine (RO) - ITALY
Tel.: +39 - 0425 - 53593
www.breviniveneta.it

EUROPE

Brevini Austria

A-4300 Gutenhofen - AUSTRIA
Tel.: +43 7435 52823
thomas.zwirner@brevini.com

Brevini Benelux

2408 AB - Alphen aan de Rijn - NETHERLANDS
Tel.: +31 - 172 - 476464
www.brevinipowertransmission.nl

Brevini Danmark

DK-2690 - Karlslunde - DENMARK
Tel.: +45 - 4615 - 4500
www.brevini.dk

Brevini España

28350 - Madrid - SPAIN
Tel.: +34 - 91 - 8015165
www.breviniespana.com

Brevini Power Transmission France

69516 - Vaulx en Velin Cedex - FRANCE
Tel.: +33-04-72-81-25-55
www.brevini-france.fr

Brevini Ireland

Allenwood, Naas, Co. Kildare - IRELAND
Tel.: +353 - 45 - 890100
www.brevini.ie

Brevini Norge

3255 - Larvik - NORWAY
Tel.: +47 - 3311 - 7100
www.brevininorge.no

Brevini Power Transmission Redüktör

Istanbul - Türkiye
Tel.: +90 216 540 5909
www.brevini.com

PIV Drives

61352 - Bad Homburg - GERMANY
Tel.: +49 (0)6172 102-0
www.brevini.de

Brevini Russia

196233 Saint-Petersburg - RUSSIA
tel +7 812 380 2162
www.brevini-russia.ru

Brevini Svenska

60116 - Norrköping - SWEDEN
Tel.: +46 - 11 - 4009000
www.brevini.se

Brevini U.K.

WA1 1QX - Warrington - ENGLAND
Tel.: +44 - 1925 - 636682
www.brevini.co.uk

Brevini Finland

02270 - Espoo - FINLAND
Tel.: +358-20-743 1828
www.brevini.fi

OVERSEAS

Brevini Australia

Girraween, NSW,
2145 - AUSTRALIA Tel.: +61 - 2 -
88484000 www.brevini.com.au

Brevini Canada

ON M9W 5R8 - Toronto - CANADA
Tel.: +1 - 416 - 6742591
www.brevini.ca

Brevini China Shanghai Gearboxes

200231 - Shanghai - CHINA
Tel.: + 86 - 21- 61620168
www.brevinichina.com

Brevini India

400102 - Mumbai - INDIA
Tel.: +91 - 22 - 26794262
www.breviniindia.com

Brevini New Zealand

PO Box 58-418 - Greenmount Auckland
NEW ZEALAND
Tel.: +64 - 9 - 2500050
www.brevini.co.nz

Brevini Power Transmission South Africa

1504 - Apex Benoni Johannesburg
SOUTH AFRICA
Tel.: +27 11 421 9949
www.brevinisouthafrica.com

Brevini South East Asia

608780 SINGAPORE
Tel.: +65 - 6356 - 8922
www.brevini-seasia.com.sg

Brevini USA

47396 Yorktown, Indiana - U.S.A.
Tel.: +1 - (765) 759-2300
www.breviniusa.com

Brevini Japan

650-0047 - Kobe - JAPAN
Tel.: +81 - 078 - 304 - 5377
www.brevinijapan.com

Brevini Korea

1254 - Seoul - KOREA
Tel.: +82 - 2 - 2065 - 9563/4/5
www.brevinikorea.co.kr

Brevini Latino Americana

13487-220 - Limeira - São Paulo - BRAZIL
Tel.: +55 - 19 - 3446 8600
www.brevini.com.br

Brevini De Mexico S.A. C.P.

76120 Querétaro - MEXICO Tel.:
+52 - 4422 - 100389
www.brevini.com